



Altair® Twin Activate™ 2025.1

ThermoPower T v3.1

README

This is the ThermoPower_T installation package.

It contains the following files:

- 'ReadMe.txt': Text version of this file.
- 'ReleaseNotes.txt': Short descriptions of updates, fixes and known issues.
- 'ThermoPower_T': a ready-to-use Twin Activate library.

See below for installation instructions.

INSTALLATION OF THERMOPOWER_T

- Start Twin Activate, Release 2023.1 or newer.
- Remove a previous version of ThermoPower_T from Extension Manager (if any exists).
- Unzip ThermoPower_T_3.1.zip to an arbitrary path.
- Add ThermoPower_T folder as new Extension in Extension Manager.

WHAT WILL BE INSTALLED

- The ThermoPower_T library in the Palette
- Examples of ThermoPower_T components usage in Demo Browser
(if not visible, please select View > Demo Browser)
- Documentation available by right-click > Help on any block of the library

